

風量静圧

風量静圧

風量設定(弱)		風量設定(弱)		風量設定(中)		風量設定(中)		風量設定(強)		風量設定(強)	
電源周波数(50Hz)		電源周波数(60Hz)		電源周波数(50Hz)		電源周波数(60Hz)		電源周波数(50Hz)		電源周波数(60Hz)	
静圧(Pa)	風量(m ³ /h)	静圧(Pa)	風量(m ³ /h)	静圧(Pa)	風量(m ³ /h)	静圧(Pa)	風量(m ³ /h)	静圧(Pa)	風量(m ³ /h)	静圧(Pa)	風量(m ³ /h)
157.1	0.0	197.1	0.0	208.7	0.0	282.4	0.0	220.2	0.0	314.5	0.0
139.1	53.7	178.6	40.7	199.8	41.0	271.5	38.7	213.5	32.8	304.5	34.8
123.6	94.5	162.6	79.0	192.1	86.6	260.0	99.7	206.8	63.7	295.4	76.2
107.4	116.1	140.7	106.9	183.1	156.2	243.3	160.0	204.8	108.3	291.5	109.5
87.7	148.9	111.4	134.3	172.2	204.8	225.8	210.9	204.8	163.2	289.9	156.1
67.9	180.0	93.0	165.3	161.3	246.8	206.5	257.8	200.3	214.2	282.2	203.7
56.1	196.6	74.9	191.8	145.8	283.7	190.2	292.9	194.4	256.7	267.4	282.5
40.1	221.6	54.9	219.7	129.6	306.4	169.9	322.5	186.1	291.4	255.3	324.4
15.9	238.5	42.3	236.8	110.8	339.7	140.8	353.7	168.5	346.3	236.7	366.1
7.5	253.2	25.9	250.0	88.6	364.6	105.2	387.5	154.5	384.8	212.3	409.8
0.0	277.5	12.9	263.8	69.0	379.9	78.5	403.2	139.6	415.5	187.0	450.2
		0.0	289.5	39.5	392.4	52.7	413.7	117.2	448.3	148.4	492.4
				21.4	415.6	31.9	435.6	85.1	477.0	108.8	518.9
				5.6	439.6	15.5	454.0	62.3	494.6	70.2	538.4
				0.0	447.2	0.0	470.3	38.6	525.3	46.9	561.5
								29.4	550.5	32.6	574.7
								11.4	572.2	21.7	587.9
								0.0	587.6	10.6	596.5
										0.0	611.0

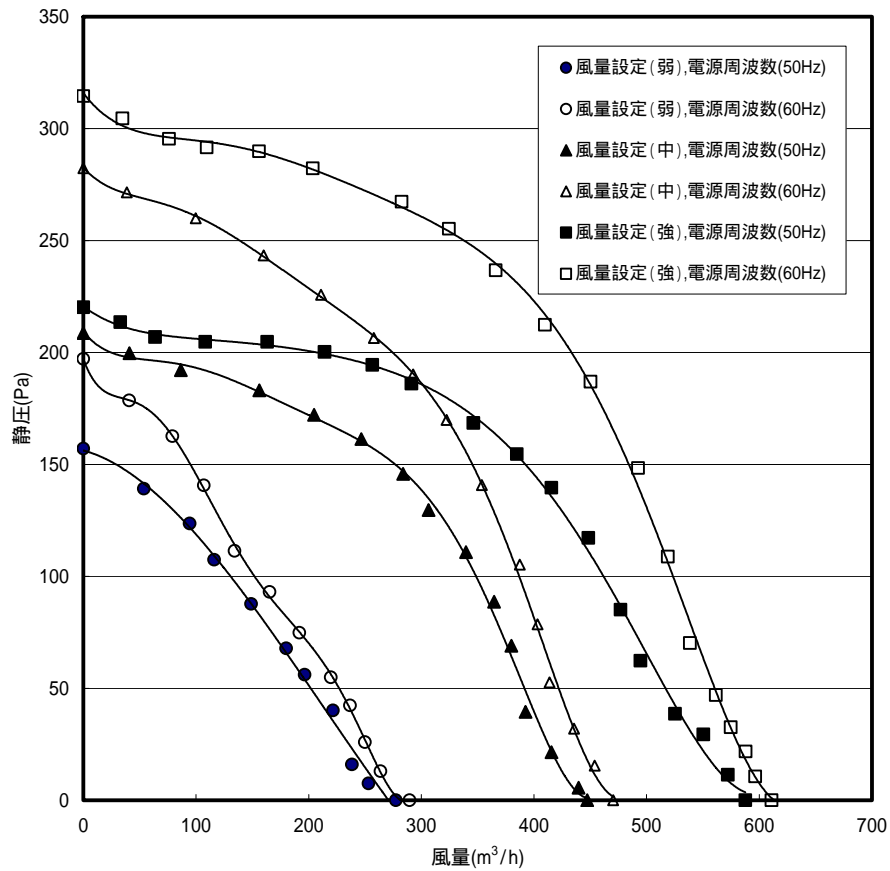


図7 風量 - 静圧曲線